

PHOENIX CONTACT Deutschland GmbH
 Flachmarktstraße 8
 32825 Blomberg
 Telefon: 0 52 35 3-1 20 00
 Telefax: 0 52 35 3-1 29 99
 Internet: www.phoenixcontact.de
 USt-ID-Nr.: DE267586943

PHOENIX CONTACT Deutschland GmbH · 32823 Blomberg

Mail to: hans-joachim.rabe@pk-components.de

pk components GmbH
 Department Purchase/Materials Administration

Marketing Device Connection Technology
 Heiko Steinkamp
 31. October 2014



**Change of the solder pin and spring actuator of the PTS 1.5 – KAA140004 product series
 Please forward this information to your electrotechnical departments!**

Dear Sir or Madam

In the course of our continuous improvement process, the shape of the PTS 1.5 solder pin will be optimized. The material thickness and the shape of the solder pin are changed to improve the stability on the PCB. The hole diameter of 1.2 mm will not be changed so that changes in the layout of the PCB are not required.

In the course of this improvement, the shape of the spring actuator will be changed on the one hand in order to strengthen the actuator and to be able to ensure the optimal guide in the housing. On the other hand, the position of the spacer ribs will be changed for an improved stability of the PCB terminal block on the PCB.

The technical features, plug-in behavior and dimensions will not be influenced by this change.

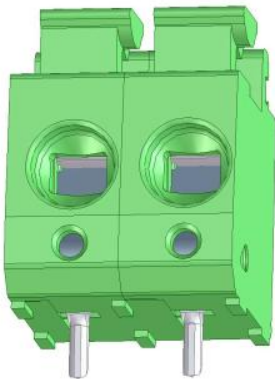
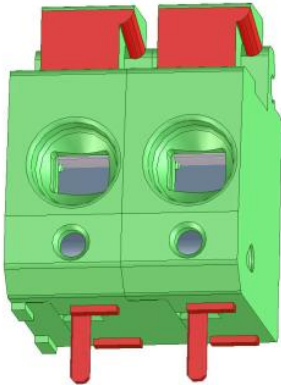


Old production status	New production status
 <p data-bbox="400 1758 580 1792">General view</p>	 <p data-bbox="1054 1771 1230 1800">General view</p>

Sitz der Gesellschaft: 32825 Blomberg
 Amtsgericht Lemgo HRB 7008

Geschäftsführer:
 Ulrich Leidecker
 Andreas Rau

Deutsche Bank AG
 (BLZ 360 700 50) 332 2211 00
 BIC: DEUTDE33XXX
 IBAN:
 DE42 3607 0050 0332 2211 00

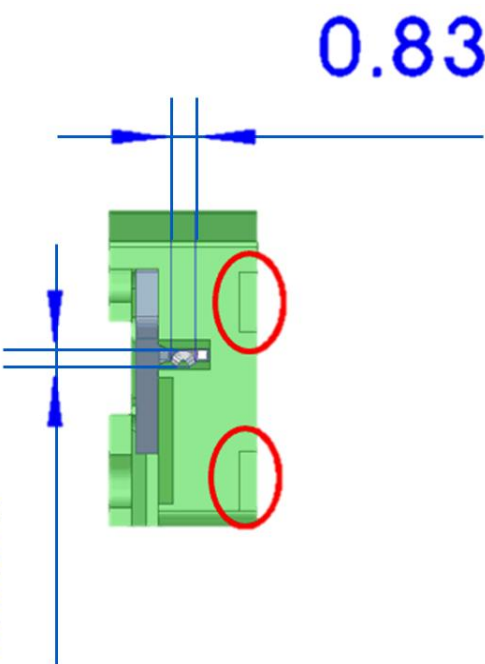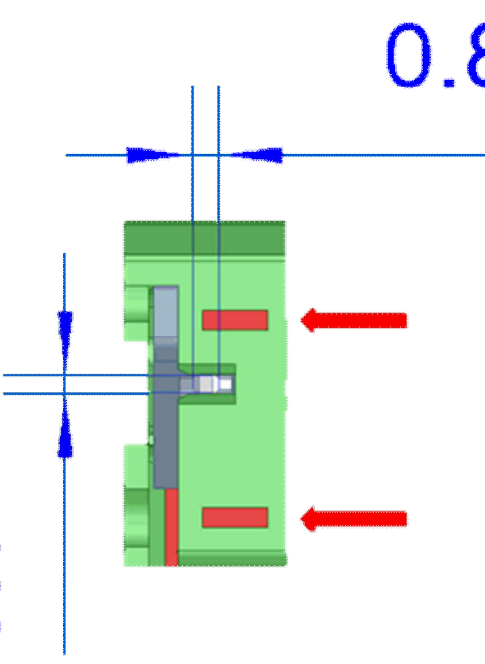Commerzbank AG
 (BLZ 476 400 51) 224 4333 00
 BIC: COBADE33XXX
 IBAN:
 DE73 4764 0051 0224 4333 00

 <p>0.83</p> <p>0.53</p> <p>Dimensioning of the solder pin and spacer ribs</p>	 <p>0.8</p> <p>0.5</p> <p>Dimensioning of the solder pin and spacer ribs</p>
 <p>Detailed view of the spring actuator</p>	 <p>Detailed view of the spring actuator</p>

The existing stock can still be used. The new version will be delivered as of June 1, 2015.

Do you have any questions? You are welcome to contact our support engineer or the sales team in Blomberg.

Yours faithfully

Enclosure

PHOENIX CONTACT Deutschland GmbH

i.A.



Enclosure
List of articles

Customer material	Phoenix Contact order number	Phoenix Contact order designation